


# Concrete Curb – Removal and Replacement

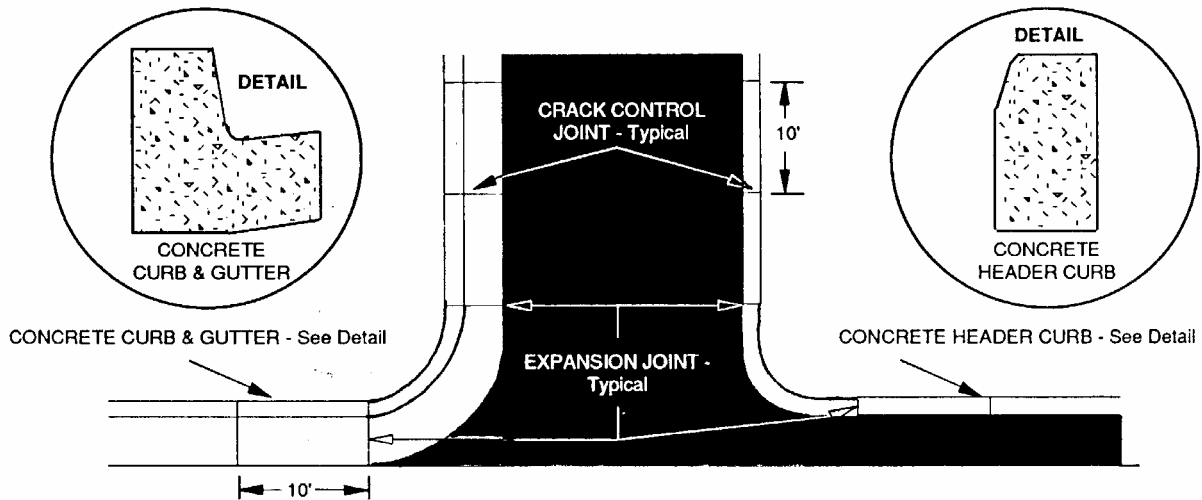

1. Layout and mark all areas of repair.
2. Demolish and remove areas to be repaired to the nearest joint or saw cut. Dispose of all debris offsite.
3. Cut walls of demolition to produce vertical edges.
4. Install forms as necessary to retain and support concrete
5. Roll existing subgrade materials to achieve maximum density.
6. Install full-depth 3,500 PSI air entrained concrete to match existing adjacent curbs. Install expansion joint material every 100 linear feet, at the beginning and end of short radii and at structures. Install crack control joints every 10 linear feet. Concrete surface finish to be light-broom finished to ensure traction.
7. Apply curing compound and/or provide protection against elements as necessary to promote curing of new installation.
8. Remove forms and backfill adjacent disturbed areas with on-site materials.

