


Full-Depth Finish Asphalt Restoration

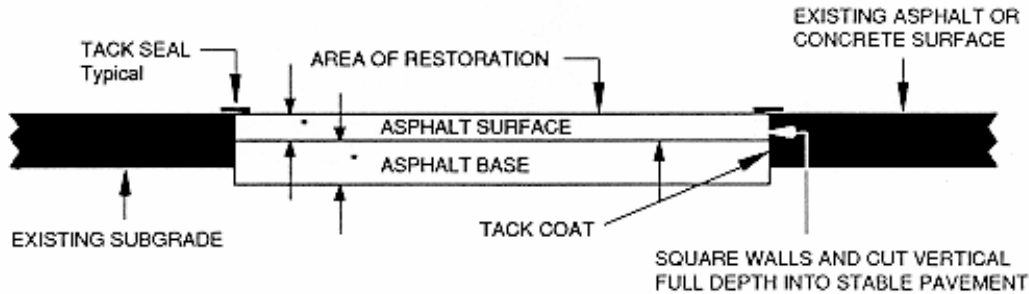

1. Layout and mark all areas of repair.
2. Excavate areas to be repaired to a depth of 6",
Dispose of all debris off-site.
3. Square surface of repair and cut walls of repair to produce vertical edges.
4. Roll existing subgrade materials to achieve maximum density.
5. Mechanically apply liquid asphalt tack coat to all vertical edges of repair.
6. Install 4" of hot mix asphalt base course material.
7. Roll asphalt base course to achieve a true and firm finish.
8. Tack coat surface of asphalt base course to provide proper bonding of the new surface course.
9. Install 2" of hot mix asphalt surface course material.
10. Roll surface course to achieve a true and firm finish to match existing grade.
11. Apply seal of liquid asphalt to the adjoining edges of the finished repair to help prevent moisture penetration.

NOTE: Asphalt General is not responsible for ponding water or poor drainage in areas where grade is less than 2%.

