


Asphalt Overlay with Paving Fabric

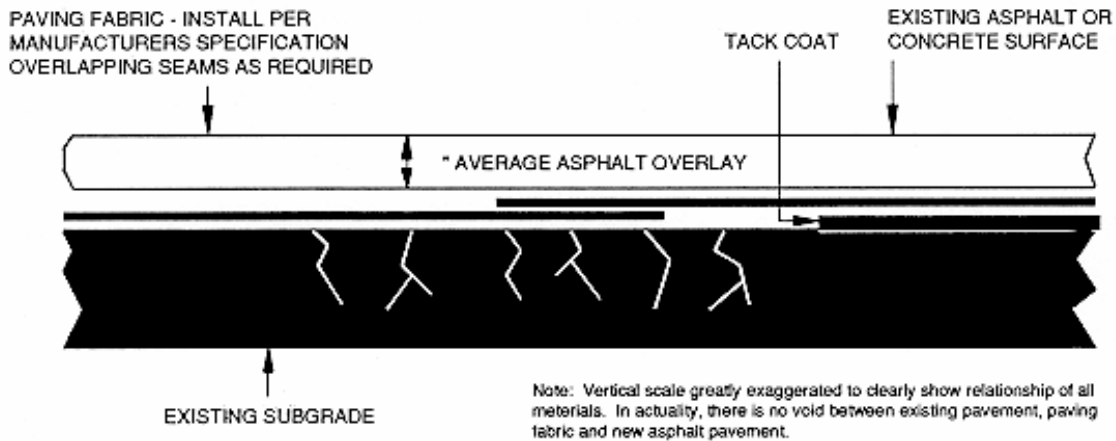

1. Lay out and mark all areas to receive paving fabric reinforcement and overlay.
2. Where asphalt overlay adjoins existing surfaces, provide for a transition.
3. Clean areas of vegetation, dirt and surface debris as required. Dispose of debris off-site.
4. At areas of severe separation, fill with appropriate material.
5. Install asphalt leveling course material when needed to level any severely depressed areas.
6. Mechanically apply liquid asphalt tack coat to surfaces receiving paving fabric reinforcement. Apply at a rate specified for appropriate fabric.
7. Install paving fabric reinforcement according to manufacturer's specifications.
8. Install 2" average depth of asphalt surface course material.
9. Roll surface to achieve a true and firm finish.
10. Apply a seal of liquid asphalt, when necessary, to the adjoining edges of the overlay to help prevent moisture penetration.

NOTE: Asphalt General is not responsible for ponding water or poor drainage in areas where grade is less than 2%.

