
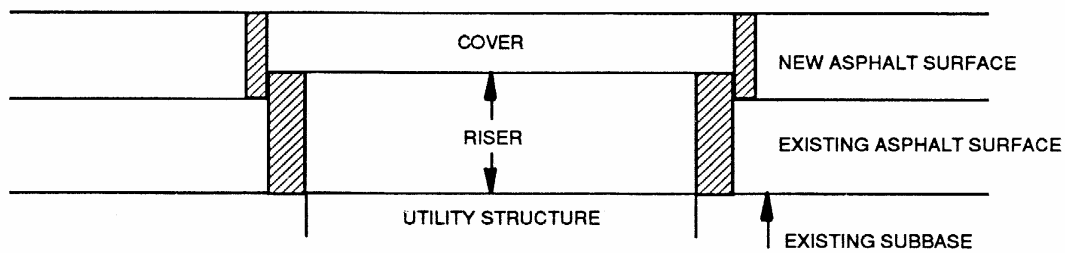


# Utility Adjustments

1. Adjustments for existing utilities will be accomplished by one of the following methods:
  - 1) Transitioning the pavement to the utility;
  - 2) installing risers;
  - or 3) resetting the utility.

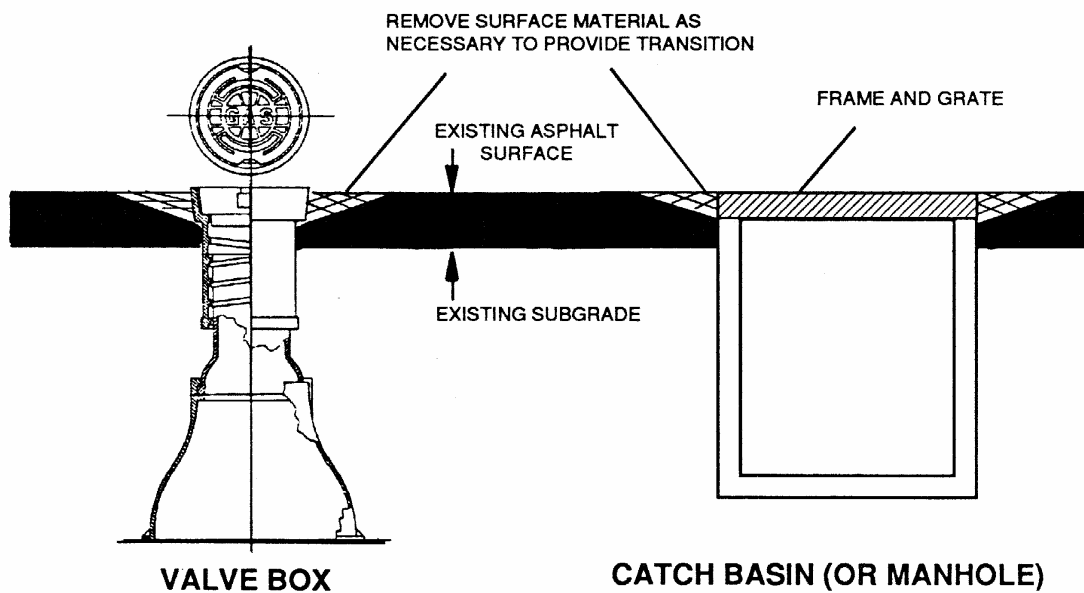

NOTE: PREFABRICATED RISERS CAN BE USED TO ADJUST UTILITY ELEVATIONS PRIOR TO ASPHALT OVERLAYS.

RISER